

 
## Step 5

After the hardware installation, the computer is ready for booting. Windows will find new hardware. Please cancel this message and insert your Club 3D Driver CD. Choose the driver matching your Operating System. Reboot your system after installation is completed.

Select "Cancel"



Select your operating system

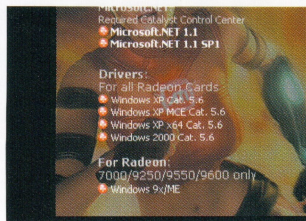

## Driver Installation

All Radeon cards use the same driver. You only need to select the correct operating system to get the correct driver installed to your system. Best results can be obtained when you download your monitor driver from your monitor vendor website first. During driver installation, we recommend to switch your virus scanner off and not to connect a second monitor.

## Catalyst Center

Your Club 3D Radeon product is an advanced piece of hardware for your PC. To control all the Graphical Power, you can use the Catalyst Control Center (CCC) application. With this application you can create the settings for dual display setups or customize the way you want to play your games. The more advanced Radeon versions of Club 3D will also allow you to make the HDTV settings for ultra modern displays. The Catalyst Control Center is dynamic and it will tune itself towards your hardware. This means, when you add a CrossFire Master Card to your Radeon setup, you will see a CrossFire tab in the application. If your Radeon is featured with thermal sensors, you will see a thermal reading tab.



## Problem shooting

- If you are facing problems with applications or stability please do the following;
  - Go to our supportpage ([www.club-3d.com](http://www.club-3d.com)) and click on the driver update image for Radeon cards
  - Download the latest driver that is applicable to your operating system
  - After download, uninstall the current ATI drivers. (use add/remove program tool)
  - Reboot your system and install the new drivers.
  - If your system is AGP, disable AGP fastwrite in your mainboard BIOS settings.
  - Use a free powerline from your Powersupply when your VGA cards needs external power.
  - Never combine the powerline from your HDD with your VGA card.
- After using latest driver for my Radeon card, applications are still not running stable
  - Visit your motherboard vendor website and download latest motherboard chipset drivers.
  - Visit your application vendor website and download latest software updates.
  - Visit Microsoft Windows Update to install latest Windows updates.
- I installed the VGA card and there is no image
  - Check if you reconnected the mains cable and the power cable of the card (if applicable)
  - Your monitor is powered and the VGA cable is attached.
  - Check if the VGA card is completely in the PCIE or AGP slot.
  - Clean the AGP/PCIE contacts of the Radeon card with a piece of gummy and try again.
  - If you have a completely new system, try the VGA card in a second system.

### Disclaimer:

While we endeavor to provide the most accurate, up-to-date information available, the content on this document may be out of date or include omissions, inaccuracies or other errors. Therefore Club 3D does not accept any rights claimed on the content of this document. Please refer to a full overview of our Legacy Terms and Conditions on [www.club-3d.com](http://www.club-3d.com). All content is subject to change without prior notice. Copyright © 2005, Club 3D B.V.

# Software Installation



## Introduction and Warranty guidelines.

Congratulations with the purchase of a Club 3D product. Club 3D will bring more entertainment to your PC.


This guide will help you to install your new Club 3D product safely, with ease. Please study all images and text before starting. If you still have any questions, please contact us through our website at [www.club-3d.com](http://www.club-3d.com). For any broken products, i.e. not working because of product fault or missing parts, please return the product to your local store for warranty. Club-3D offers warranty through the store where you bought the product, that's why it is important to keep your invoice with you. In case the store is out of business, you can find details for having service on your product through our support page on our website. Service is only applied with original invoice.

The images on this document are meant for illustration purposes only. Your actual product or situation may vary.


## Step 1

Electronic parts are sensitive to electrical discharges, caused by improper handling. To avoid damage, do not touch any components or blank contacts on your Club 3D product.

 Wrong product handling

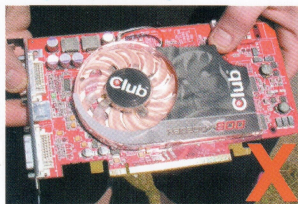


Correct product handling

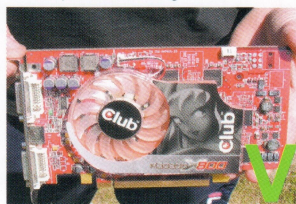 


## Step 2

Disconnect the mains cable from your PC in order to avoid any electrical danger when working on the inside of your PC.

 Unsafe situation for working

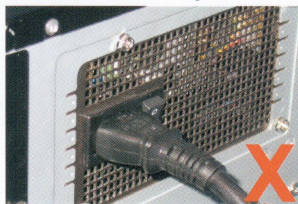


Safe situation for working

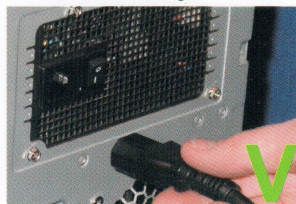 


## Step 3

Remove the sidepanel from your PC and locate the AGP or PCIe slots. Choose a free slot matching your Club 3D product interface. This image displays a PCIe version.

 Location of PCI and PCIe slots

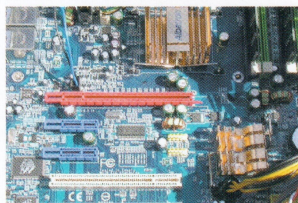


Correct product installation

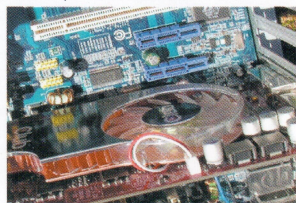 


## Step 4 (optional)

Some cards require additional power. Those cards will have a power connector on the right upper corner shown as the images on the right.

 Location of AGP Power Connector

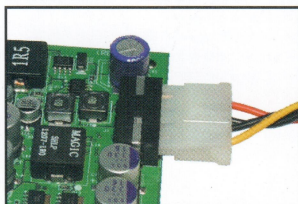

Location of PCIe Power Connector

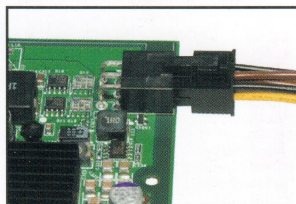 

# Hardware Installation